

# PINNACLE SL600

HARMAR'S MOST COMPACT STAIR LIFT




## A STEP ABOVE

The Pinnacle SL600 has earned its name and reputation for standing above the rest. Design, form, and function come together to make Pinnacle reliable, durable, and the most sought after stair lift available.

What makes Pinnacle different? It's what you don't see, the patented helical worm gear and reinforced nylon polymer gear rack. This drive system eliminates maintenance, and provides you with savings on lower energy bills and delivers a smooth ride.

- Just 10 ½" wide when folded
- Ergonomic control switch
- No lubrication required
- Retractable seat belt

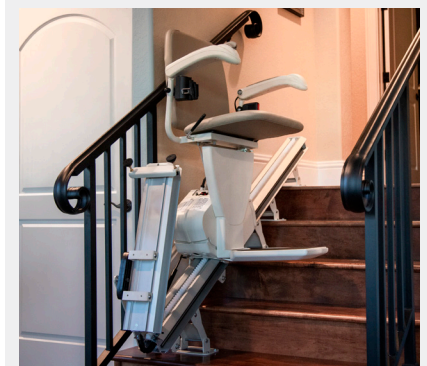

## CLEAR WALKWAYS

Harmar's exclusive automatic and mechanical folding rail (optional) removes obstructions and trip hazards at the lower landing area. Its operation is automatic, the user does not need to stop or have someone else assist. And since it's mechanical, there are no additional switches or controls.

# PREMIUM PERFORMANCE YOU DESERVE



*I couldn't be happier with the Pinnacle. I'm so glad I made this choice for my home. I feel safe going up and down the stairs again, and it's never in the way for my grandkids!*



## SL600 PRODUCT SPECIFICATIONS

<b>WEIGHT CAPACITY</b>	350 lb	<b>TRACK LENGTH</b>	15' 6" to 70'
<b>SPEED</b>	20 FPM	<b>SEAT SIZE</b>	19" x 16"
<b>INCLINE LIMITS</b>	27° to 52°* * inclines above 45° may require local jurisdiction approval.	<b>FOOTREST SIZE</b>	12.3"x 13.2" 17" - 22" height adjustable
<b>FOLDED WIDTH</b>	- 10 ½" from wall - 13.6" with folding rail	<b>DRIVE</b>	- Patented nylon polymer gear rack - Helical worm gear
<b>WARRANTY</b>	- Limited lifetime - 1-year battery	<b>OPTIONS</b>	- Automatic folding rail - Key lock - Extra rail - Manual lowering tool
<b>CERTIFIED</b>	- ETL listed - CSA B44.1/ASME A17.5 - Safety standard ASME A18.1 - Rated commercial and residential	<b>SAFETY FEATURES</b>	- Retractable seat belt - Overspeed brake - LED alert system in armrest - Swivel seat with interlock - Chassis obstruction sensor - Footrest obstruction sensor - Padded armrest